








■ シャッターケーブル対応表

Shark Slider NANOとカメラのリモコン端子に接続して使用します。
タイムラプス撮影、パノラマステッチング機能などで使用します。

<p>S2</p> 	<p>Sony</p>	<p>a58 / NEX-3NL / a7 / a7r / a3000 / a6000 / HX300 / HX50 / RX100M2 / HX400 / HX60 / A7S / A7II / A7SIII / A7III / A9II / A7RIV / A9 / A7RIII / A7RII / A7R / A7III / A7 / A6600 / A6400 / A6500 / A99II / A77II</p>
<p>N3</p> 	<p>Canon</p>	<p>EOS 7D / 6D / 5Dseries / 1Dseries / 50D / 40D / 30D / 20D / 10D / R5 / 1DxMarkIII / 5D MarkII / 5D MarkIII / 5D MarkIV/ 6D MarkII</p>
<p>DC2</p> 	<p>Nikon</p>	<p>DSLR D7000 / D5100 / D3200 / D3100 / D90 / D600 / D7100 / D5300 / D610 / D5200 / D3300 / D750 / D780 / D7200 / D5600 / Z7II / Z6II / Z7 / Z6 / Z5 / DF</p>
<p>L1</p> 	<p>Panasonic Leica</p>	<p>DMC-FZ50 / DMC-FZ50K / DMC-FZ50S / DMC-FZ30 / DMC-FZ150 / DMC- FZ30K / DMC-FZ30S / DMC-FZ20 / DMC-FZ20K / DMC-FZ20S / LC-1 / L1 / L10 / G10 / G2 / G1 / Gf1 / Gh1 / Gh2 / G3 / Gx1 / Gh4 / G9 / G9L / G95 / G85 / GH5 DIGILUX2 / DIGILUX3</p>
<p>E2</p> 	<p>Fujifilm</p>	<p>X-T1 / X-E3 / X-E2 / X-E2S / X-A10 / X-A7 / X-A3 / X-A2 / X-A1 / X-M1 / XQ2 / XQ1 / X-T10 / X-T20 / X-T10 / X-T200 / X-T100 / X70 / X30 / X100F / X100T / FINEPIX S1 / X-PRO3 / X-PRO2 / GFX50S</p>

オプション（別売）

<p>S1</p> 	<p>Sony</p>	<p>a900 / a850 / a700 / a560 / a550 / a500 / a450 / a400 / a350 / a300 / a200 / a100 / a99 / a77 / a77II / a65 / a57 / a55 / a35 / a33</p>
<p>E3</p> 	<p>Canon Pentax</p>	<p>EOS 60D / 70D / 80D / 8000D / Kiss X90 / Kiss X8i / Kiss X7i / Kiss X7 / Kiss X6i / Kiss X70 / Kiss X50 / Kiss X5 / PowerShot G16 / G15 / G1X / G12 / G11 / G10 / K-5 / K-7 / K10 / K20 / K100 / K200</p>
<p>DC0</p> 	<p>Nikon Fujifilm</p>	<p>D5 / D4S / D4 / D3X / D3S / D3 / D2H / D2HS / D2X / D2XS / D1X / D1H / D850 / D810 / D810A / D800 / D800E / D700 / D500 / D300S / D300 / D200 / D100 / D1 / F6 / F5 / F100 S5 Pro / S3 Pro</p>